





uVision[™] 365 STANDARD SERIES

IP Rated, Fanless LED UV-A Inspection Lamps

Also Available UV-365ES, UV-365EH, & UV-365MEH

ALE MO

- Compact, cost-effective handheld inspection lamps
- > Available in two intensities to suit your specific needs: standard-intensity & high-intensity
- > Can be used in forensics, specialty UV applications, and NDT/NDE
- Mobile AC/DC version available!

FOR FLUORESCENT INSPECTION

IN ANY INDOOR / OUTDOOR

3 UV-A LEDS ---For wide and even area of coverage

ENVIRONMENT





Fanless & Cool Running

uVision[™] 365



Lightweight & Rugged

FANLESS DESIGN

Maintains optimum lamp temperature using state-ofthe-art heat sinks

> **PISTOL GRIP** Comfortable, balanced control

WHITE LIGHT LED Allows for scanning surface flaws

> LONG-LASTING UV-A LENSES Reduce the rate of solarization

EASY CONTROL Grip-mounted, three-way rocker switch (white light/off/UV)



uVision[™] 365 UV-365 STANDARD SERIES

MODEL	UV-A (NAL STEADY-STATE 365 nm) INTENSITY t 15 in (38 cm) ①	VISIBLE LIGHT MEASUREMENT	UV-A COVERAGE AREA at 15 in (38 cm) at minimum 1,000 μW/cm ²	AC/DC MOBILE VERSION
UV-365ES*		4,700 µW/cm ²	< 1 foot-candle (11 lux)	6.5 in (16.5 cm) Diameter	
UV-365EH*		7,000 µW/cm ²	< 1 foot-candle (11 lux)	7 in (17.8 cm) Diameter	
UV-365MEH*		7,000 µW/cm ²	< 1 foot-candle (11 lux)	7 in (17.8 cm) Diameter	•
Light Source:(3) UV-A LEDs, (1) white light LEDLamp Style:Pistol grip			ight LED		UK CACE
Lamp Head Diameter:		3.3 in (8.38 cm)			
Height:		7.5 in (19 cm)			
Width:		3.5 in (8.9 cm)			SPECTROUNE
Weight:		1.7 lb (0.73 kg) (without battery pack)			EXTERNAL OF LINE RATE ACTIVE This is could be added a diverse of the analy in 10.15 king adjut ansatzanash, (adaming ad Adde) for UE 10.15 kjpt periodical of 2-10 Kindengh at 380 - 120 an (101 ± 1 m) on anomatic dik a dynchrodinanie.
White Light LED Intensity:		400 foot-candles (4,306 lux)			Product Yamon — sithala ^{an} 203 Standard Monselly & Endow Product Yamon — <u>12 2020</u> Faced Yamon — <u>12 2020</u> Tac-Mandarg 2020 - Sight Production and Antonio and a site of a site
Power Requirements:		100-120VAC / 12VDC (Also available in 230V & 240V versions)			tit Landri redige 20 mm
Battery Pack:		Type: 12V, NiMH (rechargeable) Run time: 3.5 hours continuous Charge time: 2 hours		sion™ 365 DC MOBILE KIT	

 O UV-A intensity reading taken with the Spectroline[®] AccuMAX[™] Series meter,
and is factory set to the value shown.

*Each lamp is fitted with an 8-foot cord and the appropriate plug for the country of destination. An optional 20-foot cord is available. The "/20" suffix denotes the 20-foot power cord options.




UV-365MEH

Kit Includes:

Lamp with AC power supply, UV-absorbing spectacles, battery pack with 12V rechargeable NiMH battery, comes in a padded case.

CERTIFICATE OF LIGHT OUTPUT

UV-A Beam Profiles

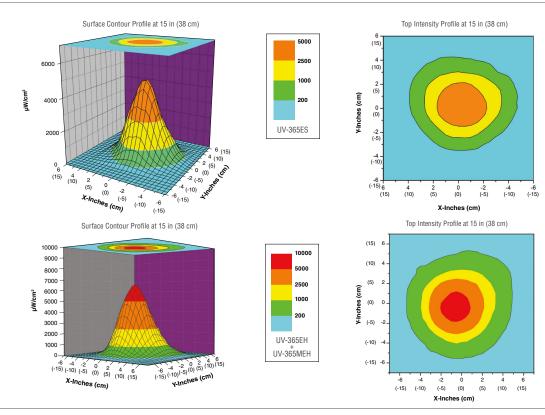

-LIV SPE RC ž L www.Spectro-UV.com

4 Dubon Ct., Farmingdale, NY 11735 866-230-7305

DISTRIBUTED BY: