



# uVision™ 365 SERIES

## NDT Inspection Lamps

The uVision™ 365 Series is Spectroline's innovative line of compact, broad-beam, handheld NDT lamps.

These lightweight, yet rugged lamps boast an IP65 rating, making them dust-tight and water-resistant. Using a state-of-the-art heat sink, the uVision™ is mechanically cooled without the need for fans. In addition to the three powerful UV-A (365 nm) LEDs, it has a convenient white light LED for illuminating work areas.

Compliant versions have embedded microprocessors to keep lamps within specifications. There are multiple power-source options as well.

**NEW!**

### INTRODUCING THE Z-MODEL

with In-Handle Lithium-Ion Battery




**COMPLIANT  
MODELS  
AVAILABLE**



**MEETS  
EN ISO 3059  
SPECIFICATIONS**



**DUST-TIGHT &  
WATER RESISTANT**

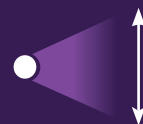

**WIDE, EVEN  
BEAM PROFILE**



**FANLESS &  
COOL RUNNING**



**NEW!**

# INTRODUCING THE Z-MODEL

**RUGGED. RELIABLE. CORDLESS.**



**BASE MODEL**  
Lamp with in-line AC power supply, UV-absorbing spectacles, comes in a protective case.  
uVision™ 365:  
**UV-365EH or UV-365ES**  
uVision™ 365 DELUXE:  
**UV-365SBLC or UV-365HC**



**NEW!**  
**Z-MODEL**  
Lamp with in-handle lithium battery, in-line AC charger and cord, UV-absorbing spectacles, comes in a protective case.  
uVision™ 365:  
**UV-365ZEH**  
uVision™ 365 DELUXE:  
**UV-365ZSBLC or UV-365ZHC**



**M-MODEL**  
Lamp with battery pack with 12V rechargeable NiMH battery, in-line AC power supply, UV-absorbing spectacles, comes in a protective case.  
uVision™ 365:  
**UV-365MEH**  
uVision™ 365 DELUXE:  
**UV-365MSBLC or UV-365MHC**



**R-MODEL**  
Lamp on a reel with 50 ft retracting A/C power cord, hooks to suspend from ceiling, UV-absorbing spectacles.  
uVision™ 365 DELUXE:  
**UV-365SBLCR or UV-365HCR**



**3 UV-A LEDs**  
For wide area of coverage

**LONG-LASTING UV-A LENSES**  
Reduce the rate of solarization

**Faceplate with INTEGRAL UV-A PASS FILTERS**  
Reduce visible wavelengths (SBLC- & HC-Models only)

**SEALED CONTROL SWITCH**  
Grip-mounted, three-way rocker switch (white light/off/UV)

**ADJUSTABLE WHITE LIGHT LED**  
Use to locate surface flaws

**POWER/BATTERY LIFE LIGHT**  
Indicates power level

**THERMAL CUT-OFF CIRCUITRY**  
Prevents lamp from going out of compliance when internal temperature exceeds specifications (SBLC-Models only)

**FANLESS DESIGN**  
Maintains optimum lamp temperature using state-of-the-art heat sinks

**PISTOL GRIP**  
Comfortable, balanced control

**NEW!**  
**IN-HANDLE LITHIUM ION BATTERY**  
(Z-Models only)  
Available in multiple power sources

	UV-365SBLC*	UV-365HC	UV-365ZHC	UV-365ES	UV-365EH	UV-365ZEH
<b>TESTED TO COMPLY WITH</b> Rolls-Royce RRES 90061 REQUIREMENTS	✓	✗	✗	✗	✗	✗
<b>TESTED TO COMPLY WITH</b> ASTM E3022-18 STANDARD	✓	✓	✓	✗	✗	✗
<b>MEETS SPECIFICATIONS</b> EN ISO 3059	✓	✓	✓	✓	✓	✓
<b>Nominal Steady-State UV-A Intensity at 15 in (38 cm) Ø</b>	< 5,000 µW/cm²	6,000 µW/cm²	8,000 µW/cm²	< 5,000 µW/cm²	7,000 µW/cm²	9,000 µW/cm²
<b>UV-A Coverage Area at 15 in (38 cm) at minimum 1,200 µW/cm²</b>	6 in (15.2 cm) Diameter	7 in (17.8 cm) Diameter	8.25 in (21 cm) Diameter	6.5 in (16.5 cm) Diameter	7 in (17.8 cm) Diameter	8 in (20.3 cm) Diameter
<b>Filter/Faceplate</b>	Integral UV-A pass filters			Standard faceplate		Clear filter
<b>Thermal Cut-Off Circuitry</b>	✓	✗	✓	✗		
<b>Visible Light Measurement</b>	< 1 foot-candles (11 lux)			< 2 foot-candles (22 lux)		
<b>In-Handle Lithium-Ion Battery</b>	<b>UV-365ZSBLC</b>	✗	✓	✗	✗	✓
<b>External Battery Pack</b>	<b>UV-365MSBLC</b>	<b>UV-365MHC</b>	✗	✗	<b>UV-365MEH</b>	✗
<b>Reel Kit (50 ft power cord)</b>	<b>UV-365SBLCR</b>	<b>UV-365HCR</b>	✗	✗	✗	✗

\*These versions are adjusted to ensure that they provide a maximum steady-state UV-A intensity of less than 5,000 µW/cm² at 15 in (38 cm)  
Ø UV-A intensity reading taken with the Spectrolin® AccuMAX™ Series meter, and is factory set to the value shown.  
Each lamp is fitted with an 8-foot cord and the appropriate plug for the country of destination. An optional 20-foot cord is available. The "/20" suffix denotes the 20-foot power cord options.



<b>Light Source:</b>	(3) UV-A LEDs, (1) white light LED
<b>Lamp Style:</b>	Pistol grip
<b>Lamp Head Diameter:</b>	3.5 in (9 cm)
<b>Height:</b>	7.5 in (19 cm) Z-Model: 9.5 in (24.1 cm)
<b>Width:</b>	3.5 in (8.9 cm) Z-Model: 3.75 in (9.5 cm)
<b>Weight:</b>	1.9 lb (0.90 kg) Z-Model: 2.65 lb (1.2 kg)
<b>White Light LED Intensity:</b>	400 foot-candles (4,306 lux)
<b>Power Requirements:</b>	100-120VAC / 12VDC*

<b>In-Handle Lithium Ion Battery:</b> Z-Model Only	Type: 14.8V, Lithium ion (rechargeable) Run time: ZSBLC: 10 hours   ZHC: 7 hours   ZEH: 8 hours Charge time: 4 hours
<b>External Battery Pack:</b> M-Model Only	Type: 12V, NiMH (rechargeable) Run time: 3.5 hours continuous Charge time: 2 hours

\*(Also available in 220-240V versions)

